

U11I Rugged Tablet Expansion Modules LF/HF RFID

User's Manual



P/N: 62+030970+22

Package Contents

If any of following items is damaged, please contact your retailer.

RFID module



RFID door bracket



CTO door plate

Screw & O RING
(8+6+2+12)

RFID Module Screws

Screw Name	Screw Type	Quantity	Torque
ISOT-M2.0X3L		8 (CTO door plate to lower case)	2.0 ± 0.2 Kgf-cm
		4 (RFID door bracket to module)	
M2.6X12L & O RING		6 (module to CTO door plate)	2.5 ± 0.2 Kgf-cm
ISOT-M2.6X4L		2 (module to CTO door plate)	2.5 ± 0.2 Kgf-cm



NOTE

The pictures are for reference only, actual items may slightly differ.

Installation

This section will guide you on how to install the expansion modules to your tablet PC.

Note: Make sure to remove the battery before installing any type of expansion modules. For more information on how to remove/install the battery, please refer to the tablet PC service guide.


Installing the RFID Module

To install the RFID module, follow the steps below:

1. Remove the 2 screws securing the CTO door to the lower case.




2. Slide the CTO door to the left to disengage it from the tabs.

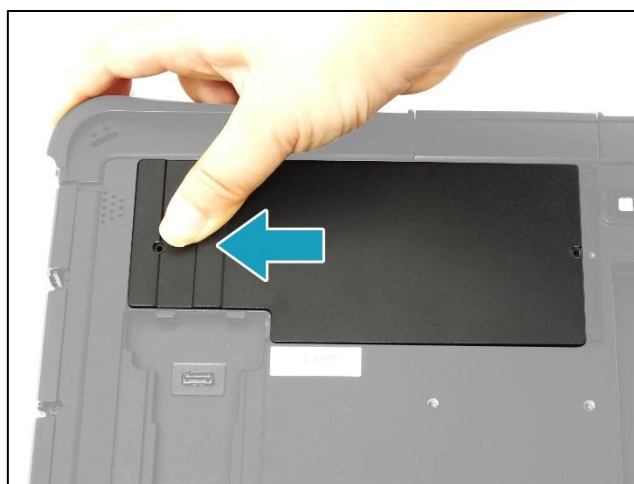

3. Remove the CTO door.




4. Remove the CTO door seal out of its compartment.

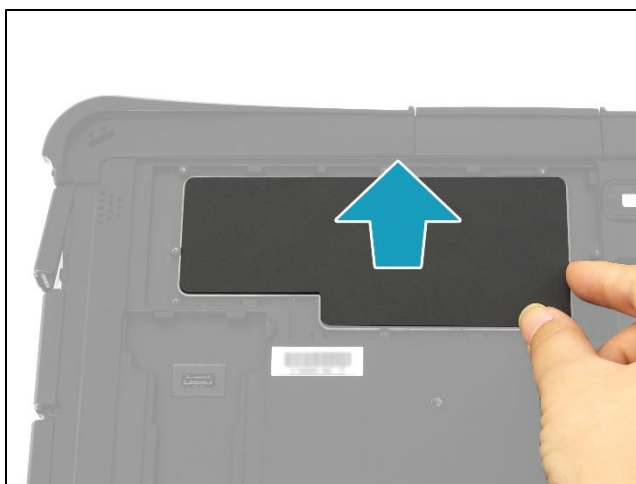


5. Connect the RFID module harness to the mainboard connector.




6. By aligning with the screw holes, install the CTO door plate onto its compartment on the lower case.

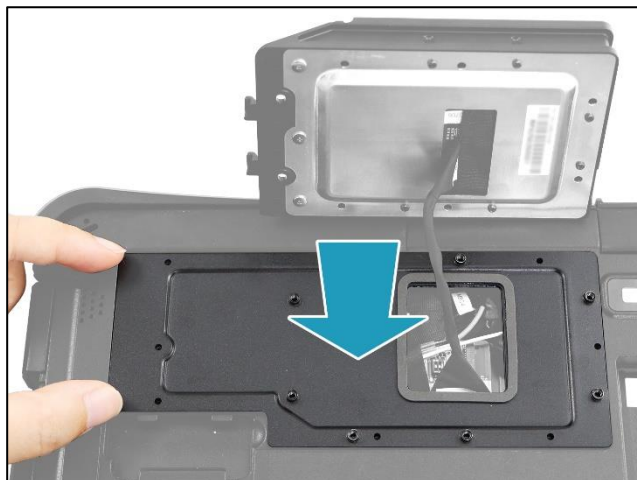

7. Attach the 8 screws to secure the CTO door plate to the lower case.

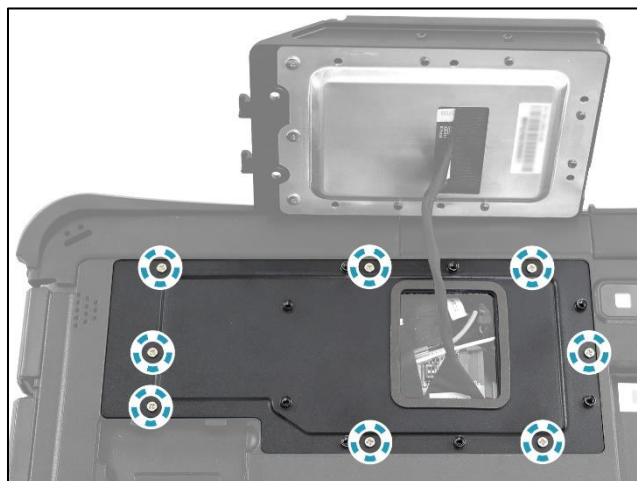


8. Attach the 8 rubber washers to the screw holes on the CTO door plate.

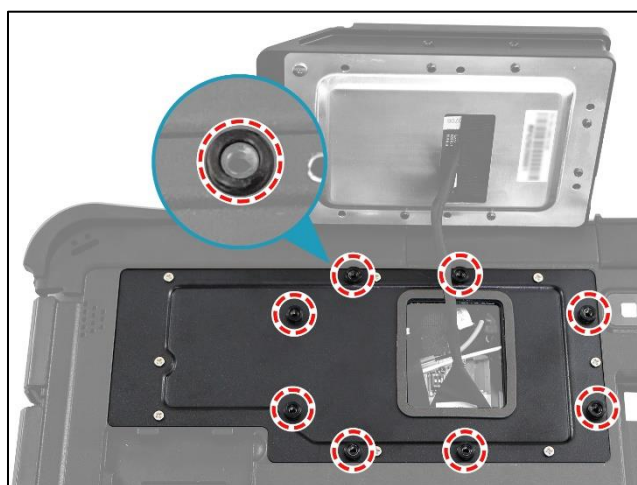


9. Fold and place the excess cable of the RFID module harness into the gap for proper cable routing.




10. By aligning with the screw holes, install the RFID module onto its slot on the CTO door plate.

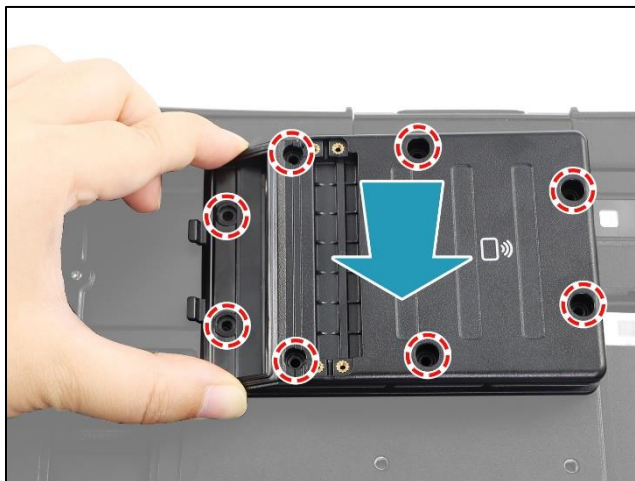


11. Attach the 8 screws to secure the RFID module to the CTO door plate.
 - M2.6X12L & O RING (A): 6 screws
 - ISOT-M2.6X4L (B): 2 screws

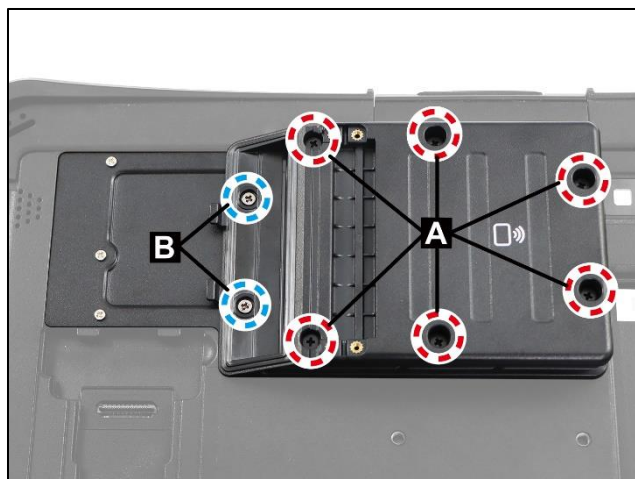

12. Push the RFID door bracket down until the latches are engaged.

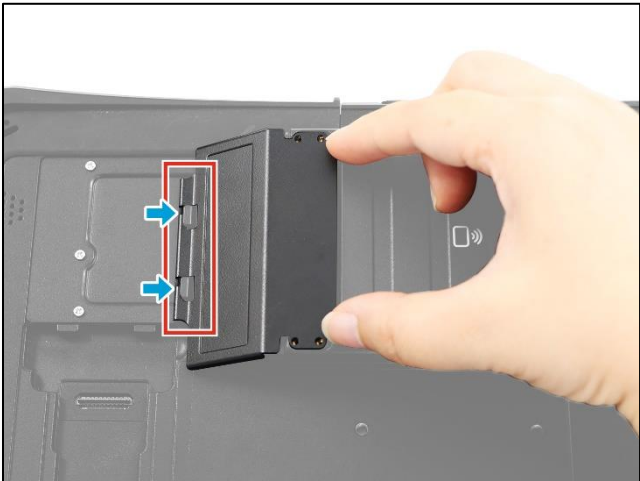

13. Attach the 4 screws to secure the RFID door bracket to the RFID module.

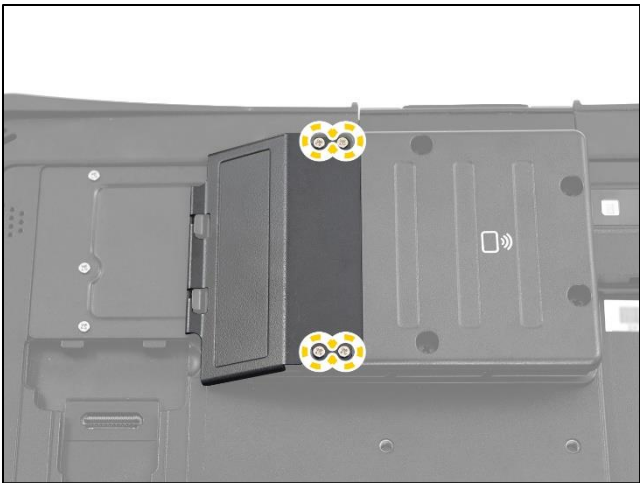

RFID Module Screws

Screw Name	Screw Type	Quantity	Torque
ISOT-M2.0X3L		8 (CTO door plate to lower case)	2.0 ± 0.2 Kgf-cm
		4 (RFID door bracket to module)	
M2.6X12L & O RING		6 (module to CTO door plate)	2.5 ± 0.2 Kgf-cm
ISOT-M2.6X4L		2 (module to CTO door plate)	2.5 ± 0.2 Kgf-cm